

Truss Frame Instructions

Assembly

1. Unfold each truss section and secure all hinge locks. Lay sections on floor with snap-fasteners facing up. Match color code marks on corners and bolt sections together with bolts and wing nuts (fig a).
2. Bolt support truss to top and bottom frame truss (fig c).
3. Unfold truss legs and feet. Attach legs to side frame truss at desired heights by screwing crank bolts into the blue colored fasteners (fig a). Height can be adjusted in six inch increments.
4. Unfold screen surface and lay over assembled frame. Starting at the corners, snap the surface onto the screen and continue around the sides (fig b). (Caution: Keep the surface ground cloth underneath the surface until the assembled screen is raised upright to prevent the surface from getting dirty - especially with rear projection surfaces.)
5. With one person supporting each side of the screen, raise the assembled unit upright and then bolt on the feet to the bottom of the legs with bolts and wing nuts (fig c). For larger screens, additional support should be provided for the center while the screen is being raised.

figure a

Corner Assembly Detail

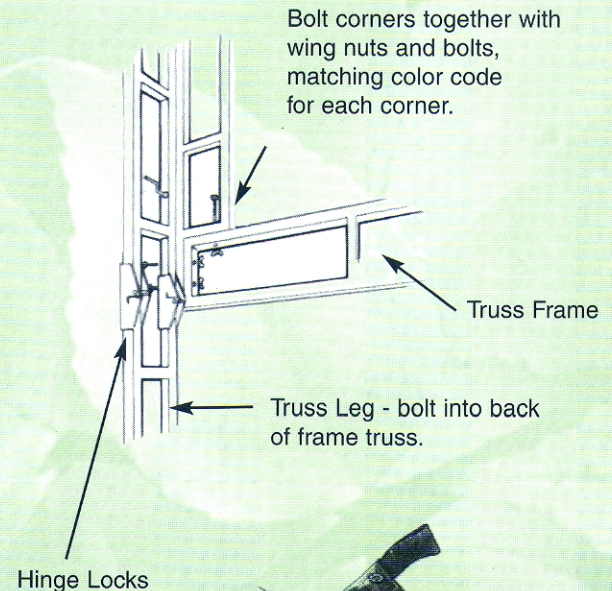


figure b


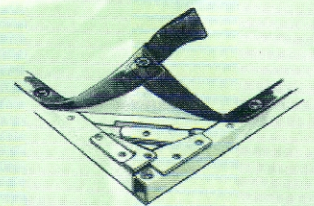


figure c

Attach support truss to top and bottom of frame.

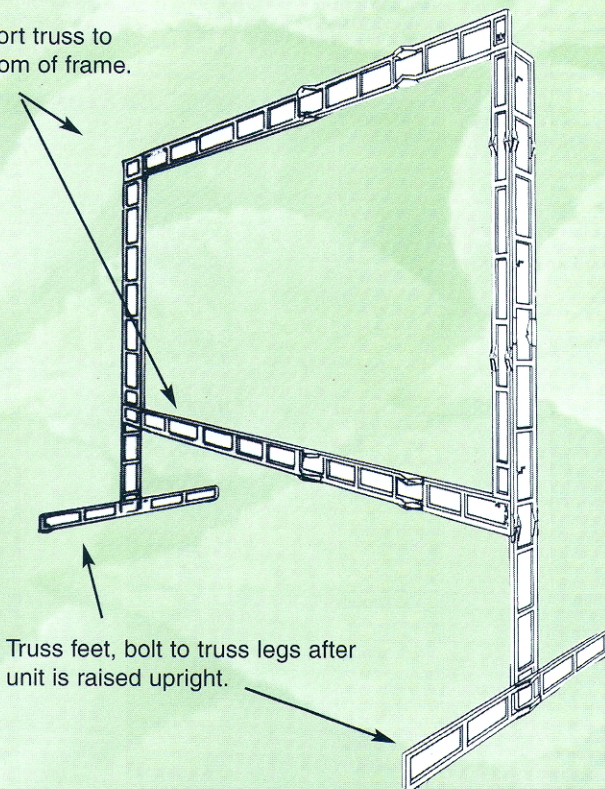

Disassembly

In general, reverse the above order.

1. Lay the protective ground cloth for the surface on the floor. Unbolt the feet from the legs. With one person per side to support the screen, carefully lower to the ground. With larger screens, additional support should be provided for the center of the screen while being lowered.
2. Carefully unsnap, remove and repack the surface (see surface instructions).
3. Unbolt legs from frame, unlock hinges and fold.
4. Unbolt corner sections of frame. Release all hinge locks on frame truss sections and fold. Return all pieces to the protection case.

The Screen Works USA
2201 West Fulton Street
Chicago, IL 60612
Phone: 312-243-8265
Fax: 312-243-8290
Toll-Free: 800-294-8111



Truss Trim Kit Instructions

Assembly

1. Assemble screen frame and legs (see instructions on reverse side).
2. Attach truss legs to the frame at the color markings for the skirt to hang a full 48". (Note: The frame may be set at various heights in 6" increments above or below the color match marks.)
3. Attach the valance bar brackets to the back of the top of the truss frame with crank bolts, matching the color coding on the valance bracket and the frame. Attach the valance bar to the front of the valance brackets (fig a).
4. Attach the two leg drape brackets to the sides of the truss frame with crank bolts (fig a). Industry compatible E-Z Fold II uses locking hooks to attach the valance bar and leg drape brackets to the side of the frame.
5. Snap the screen surface onto the frame. (Follow the directions on surface instruction sheet. Do not unfold cold surface as it can be damaged.) Snap the leg drapes to the leg drape brackets. Snap the valance to the valance bar (fig b).
6. With one person on each side supporting the screen and trim assembly, raise the unit to a vertical position and attach the truss feet to the bottom of the truss legs. Large screens may require additional support in the center.
7. Snap skirt to front of screen surface (fig b).

figure a


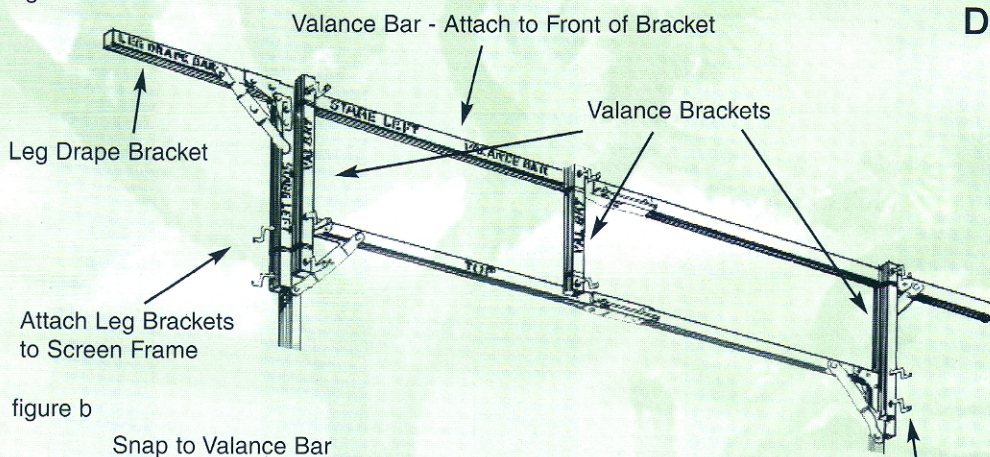


figure b

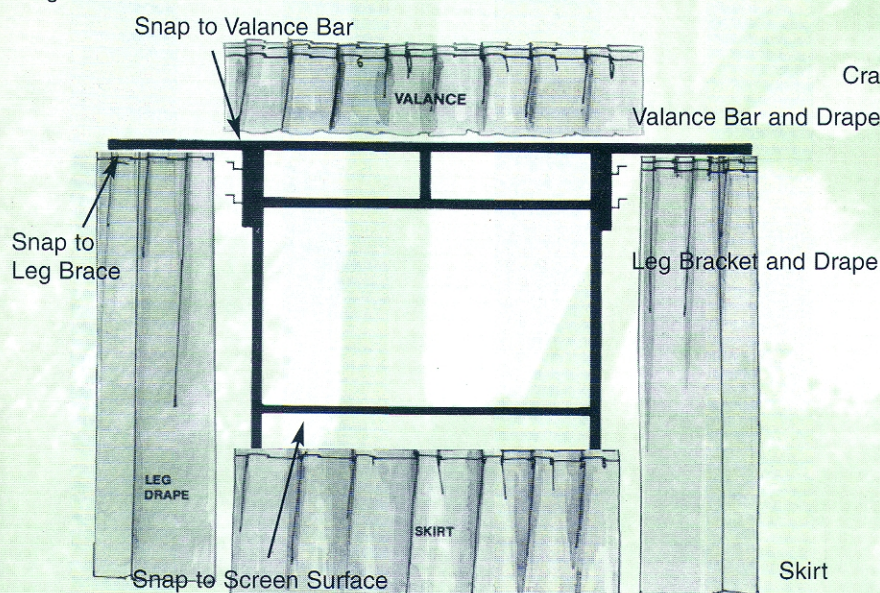

Disassembly

In general, reverse the above order.

1. Unsnap skirt from screen surface.
2. Place surface groundcloth on floor and supporting the sides of the unit, lower to the ground.
3. Remove valance and leg drapes.
4. Remove screen surface.
5. Remove leg brackets first, then valance bar and valance brackets.
6. Fold brackets, valance bar and drapery and store in trim kit case.
7. Follow instructions on reverse side to disassemble screen frame and legs.

**The Screen Works
Europe**

Bennebroekerweg 269
1435 CJ Rijsenhout
NETHERLANDS

p. +31.297.362499
f. +31.297.362498

